




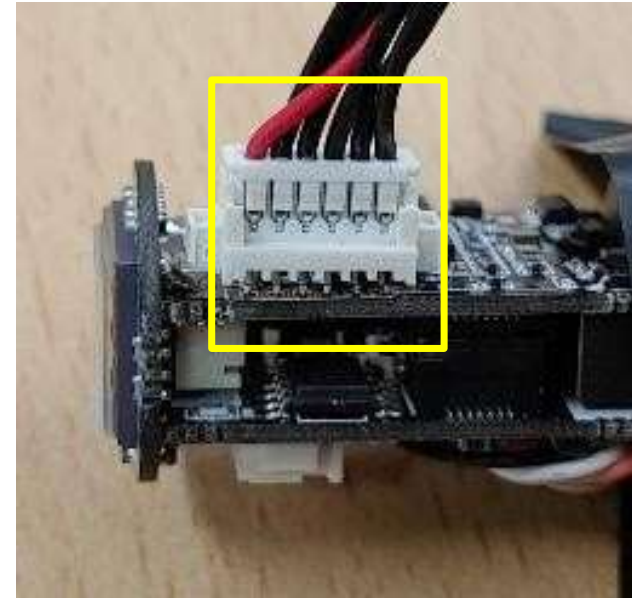

# F/W Download Guide

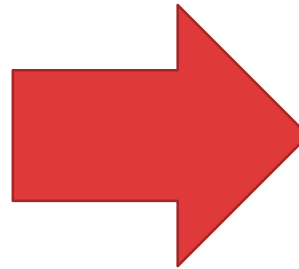


## Prepare to downloading

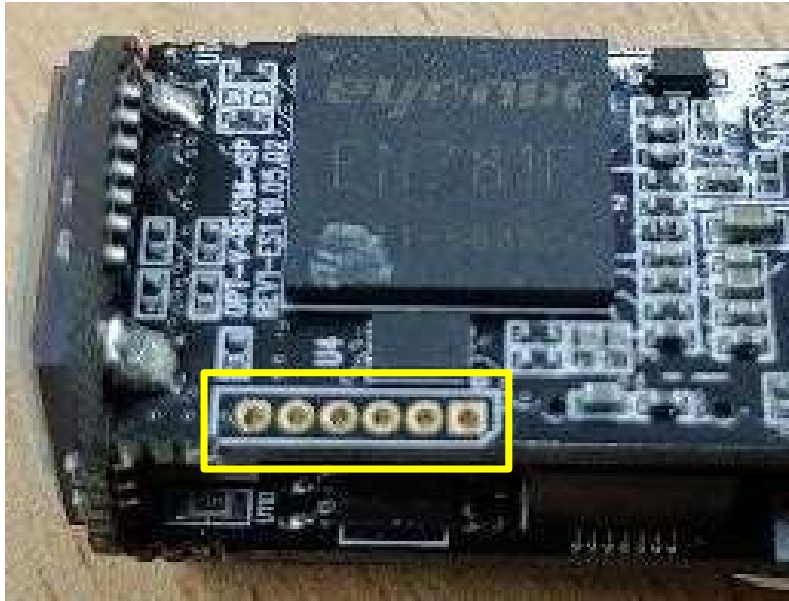

1. Connect PC(USB) and Downloader
2. Connect Downloader and POV camera as the picture
3. You move eyenix folder to C:\ from the POV SW folder in the PC




# Prepare to downloading

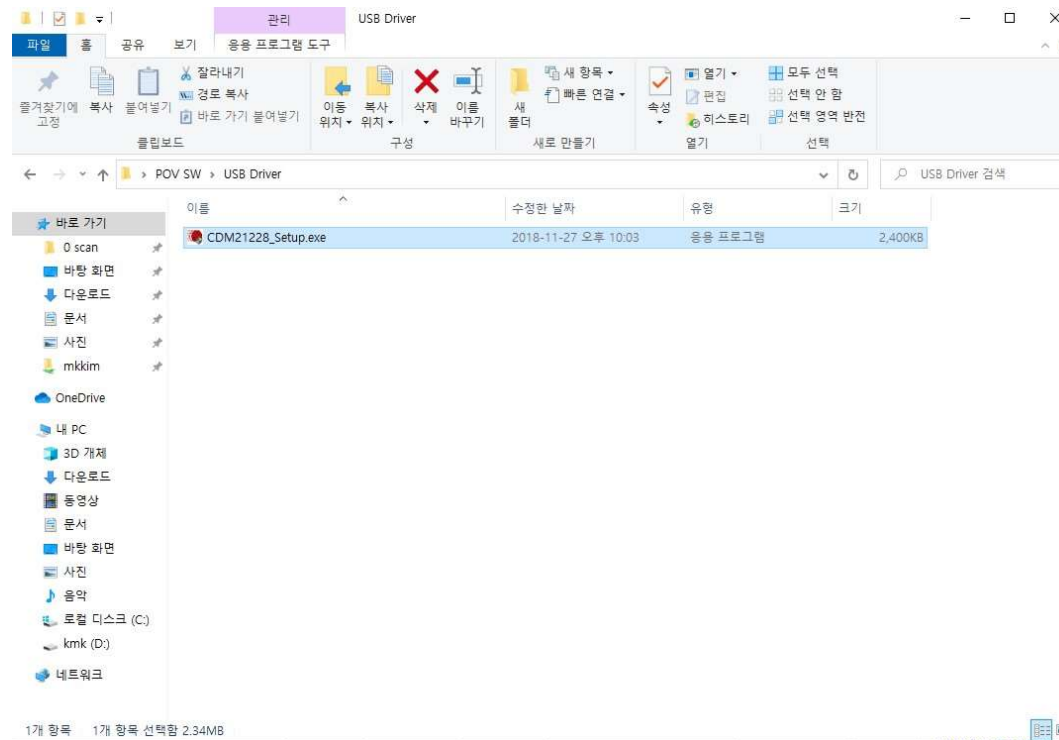

- ▶ Install the POV SW\USB\CDM21228\_Setup.exe
- ▶ Recommend OS
  - ▶ windows10





# Download

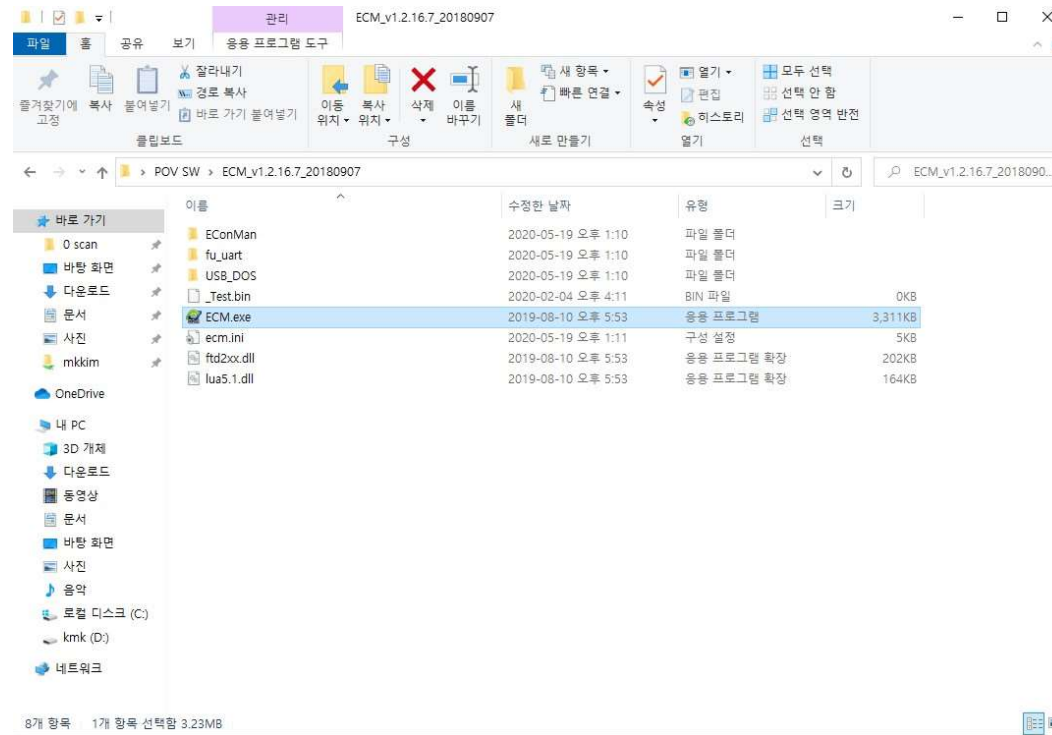

▶ Execute ECM.exe




## F/W Download

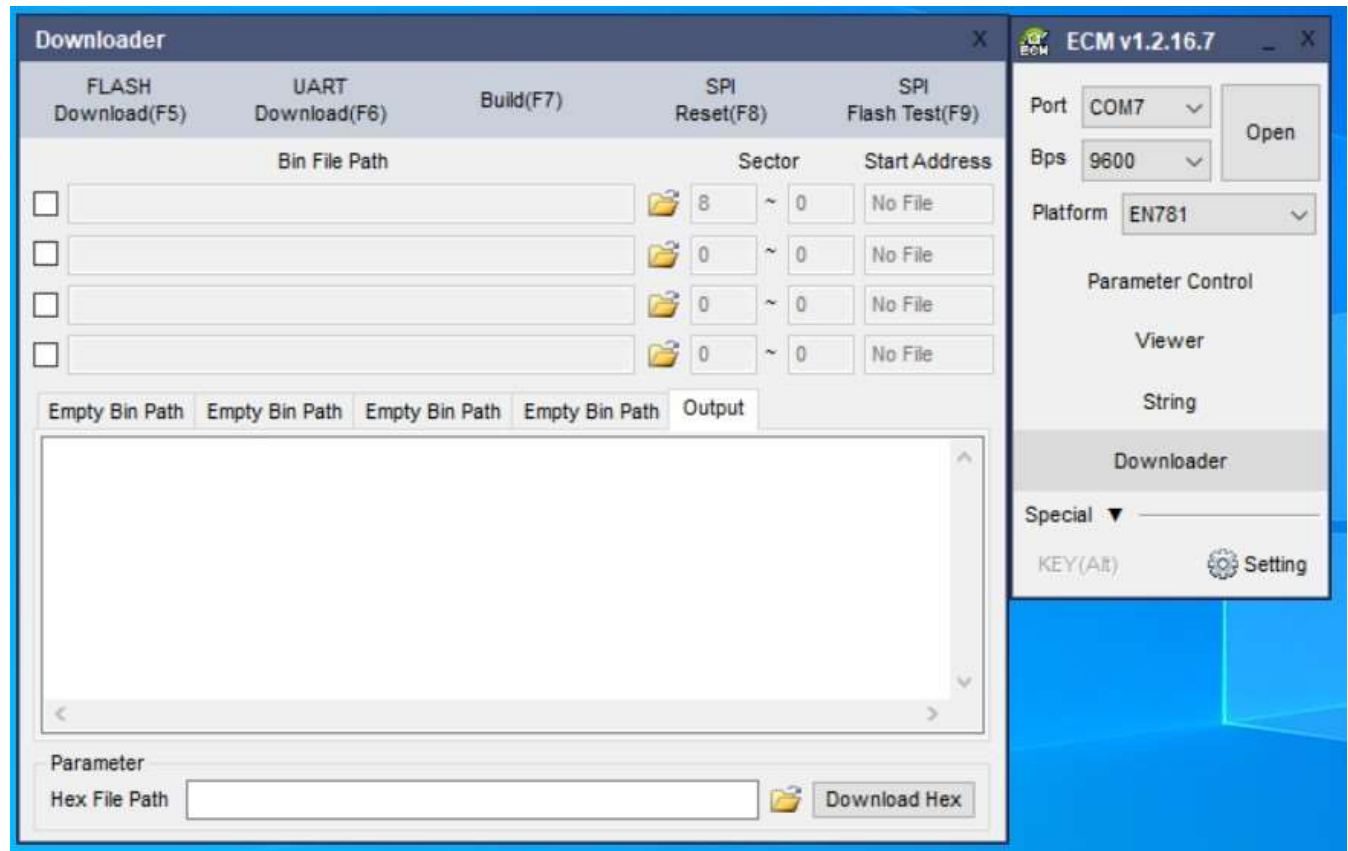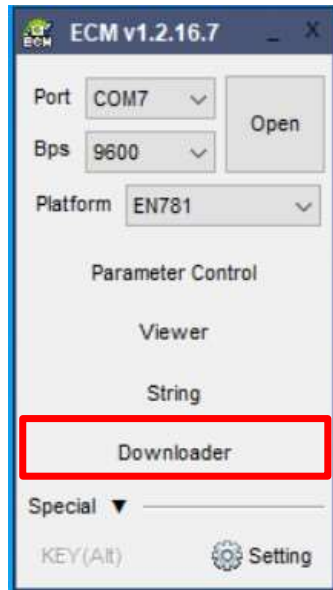

- Click the Downloader

# F/W Download

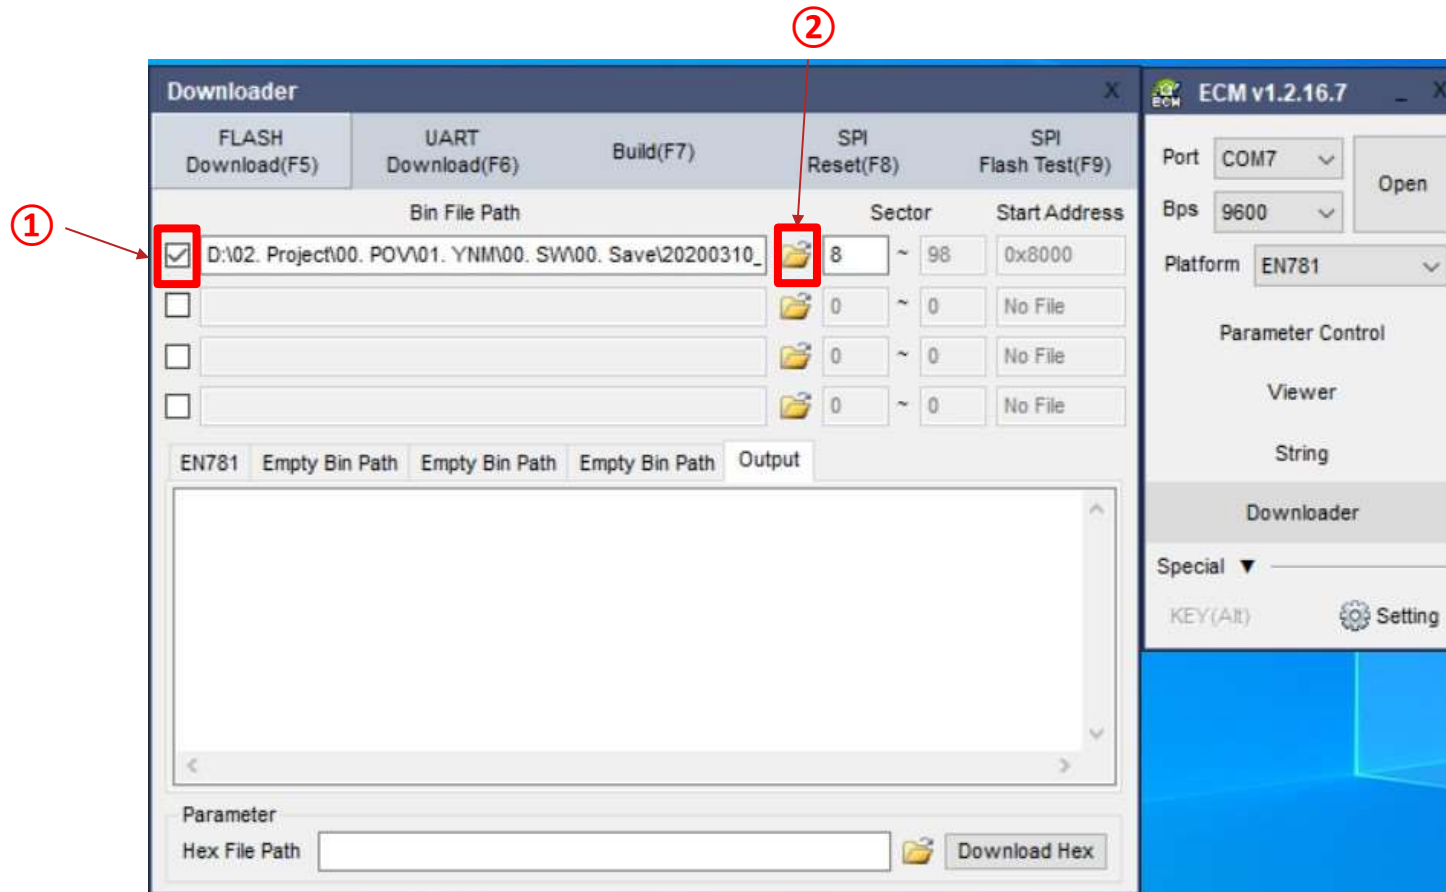


①: Enable the check box

②: Click the folder icon




## F/W Download

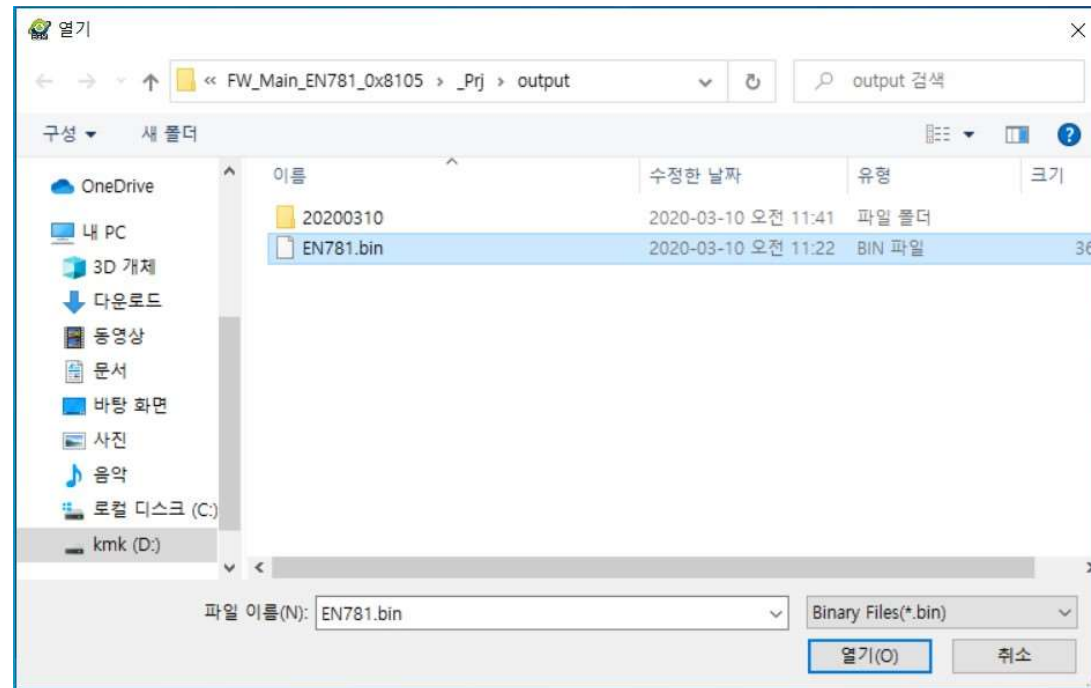

- ▶ You can select F/W file(\*.bin file)



# F/W Download

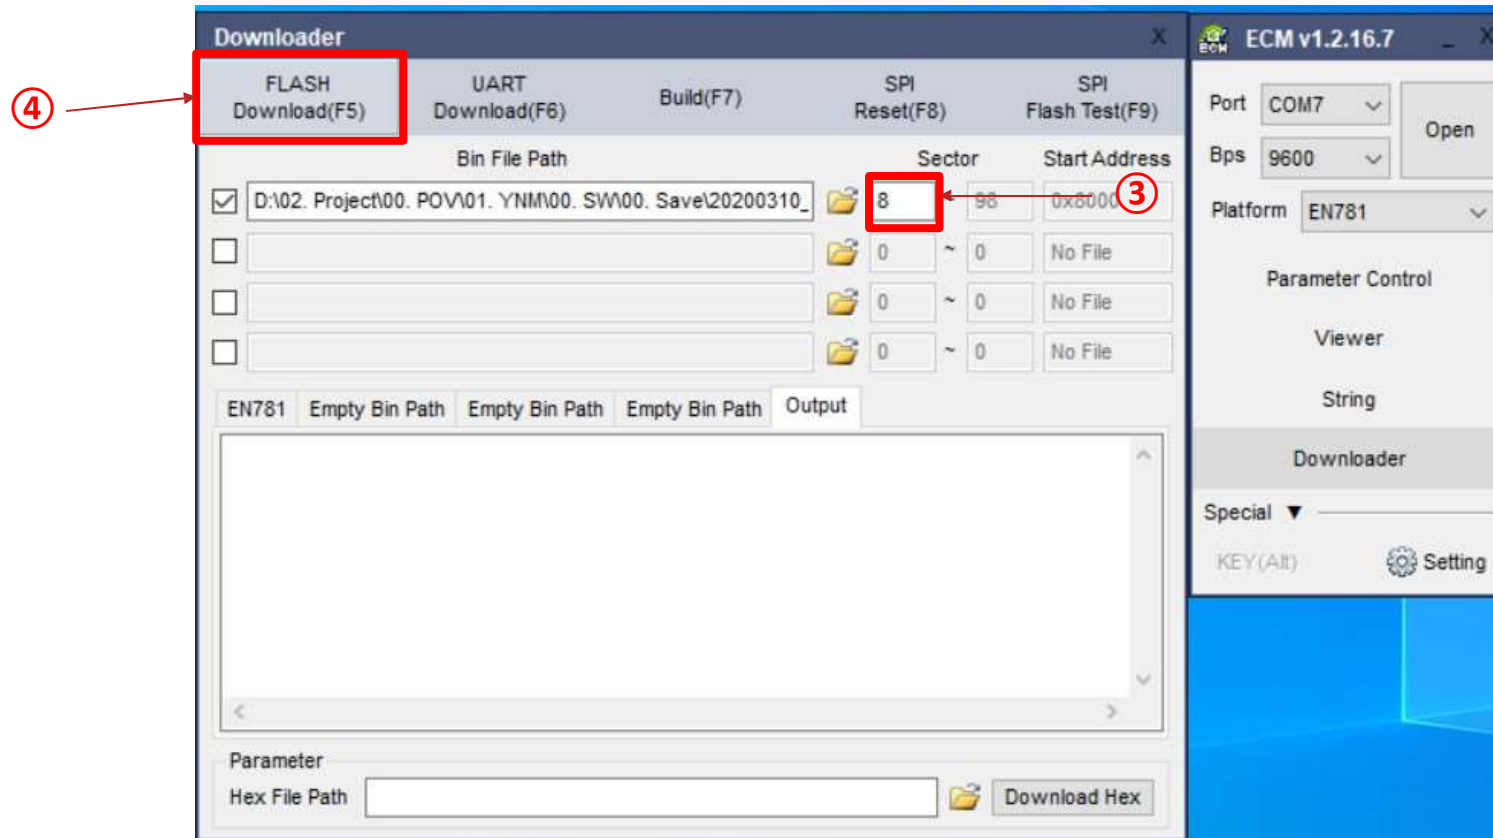

③: write 8

④: Click the FLASH Download Button